

TAKE OUT TECH



Funai VHS to DVD Converter

DVD-R or DVD-RW discs not included

Borrow for 2 weeks!

Lake Forest residents only
Ages 16 and up

Late fine: \$2/day

**KIT
FUNAI DVD
RECORDER**

3124300 634 6893



Funai VHS to DVD Converter

How to Use



This device requires DVD-R or DVD-RW discs.
DVD+R and DVD+RW discs are NOT SUPPORTED.

1. Connect the **Funai converter** to your TV. Locate your TV's 'Line In ports.' Connect the appropriate **Cable** to either the 'Composite In' or 'HDMI In' port on your TV, then connect to either the 'HDMI Out' or 'Composite Out' on the **Funai converter**. **HDMI is preferred.** Next, plug in the Funai converter's power cord.



2. Change the **Input** or **Source** on your TV. This most likely will be HDMI 1 or HDMI 2.
3. Press the **POWER** button on the **Funai converter** or the **remote**.
4. Load your DVD and VHS media. Insert a blank **DVD-R/DVD-RW disc**, label side up. Insert the VHS tape you want to convert.
5. Next you will choose your recording mode. Press **SETUP** on the **remote**. See image →
6. Select **General Setting**, then **Recording**, then **Dubbing Mode**, then **VCR → DVD**. Press **SETUP** to exit.



7. Press **DVD** on the remote. The indicator light on the front of the Funai converter switches from VCR mode to DVD mode. The TV screen will remain blank.



8. On the remote, press **REC MODE** repeatedly until the desired recording mode is set. If you are unsure which recording mode to use, press REC MODE until **SP** is selected.



Recording Mode			
You can choose a recording mode from 5 options. Recording time will depend on the recording mode you select as follows:			
Disc size	Recording mode	Recording time	Video/sound quality
8cm Disc	XP (1Hr)	18 min	☆☆☆☆☆ (good)
	SP (2Hr)	36 min	☆☆☆☆
	LP (4Hr)	72 min	☆☆☆
	EP (6Hr)	108 min	☆☆
	SLP (8Hr)	144 min	☆ (poor)
12cm Disc	XP (1Hr)	60 min	☆☆☆☆☆ (good)
	SP (2Hr)	120 min	☆☆☆☆
	LP (4Hr)	240 min	☆☆☆
	EP (6Hr)	360 min	☆☆
	SLP (8Hr)	480 min	☆ (poor)

9. Press **VCR** on the **remote**, then press the play icon  to find the point at which you start recording. Press pause  when you are ready to start recording from that point.
10. Press **D. DUBBING** on the **remote**. The video should start playing, which means you have started recording.
11. When you are ready to stop recording, press the **STOP** button on the **remote**.
12. The DVD disc must be finalized in order to be playable. Press **SETUP**, then navigate down and select **DVD MENU**, then **FINALIZE**, then **OK**.
13. Use the arrows to select **Yes**, then press **OK**. At this point it will begin finalizing your disc. Finalizing may take several minutes or up to an hour, depending how much content and in which mode you have recorded.



VHS to DVD Converter

Cost to Replace: \$420

Transfer and preserve your favorite VHS tapes to DVD.

You must purchase DVD-R or DVD-RW discs to use with this device.

DVD+R and DVD+RW discs are not supported.

Parts List

- (1) This instruction booklet with envelope
- (1) VHS to DVD converter
- (1) Remote
- (1) HDMI cord
- (1) RCA composite cord
- (1) Briefcase

Rental Info

Two week checkout with one autorenewal (if there are no holds on the item).

Overdue fine: \$2 per day

Item must be returned inside to the Adult Circulation Desk. **No book drop returns.**

www.lakeforestlibrary.org/tot

